

Bergsteiger Windsor: folding instructions

The Bergsteiger Windsor folds and unfolds in three very simple steps. The bike is folded when delivered. In the first step, the frame is unfolded. In the second step, you only have to fold down the handlebars and the pedals. The folding bike is then ready for use. To fold the bike back up, simply reverse the steps (fold pedals and handlebars – then fold frame).



1a) Fold the frame together.



1b) When folding, you should hear a clicking sound. The quick release is now engaged. To unfold later, pull the quick release upwards.



1c) Turn the quick release to the right and fold it over. If this is not possible / too difficult, loosen the opposite nut a little.



2) Fold the handlebars. The handlebar can be fixed using the folding lever. As soon as you hear the "click" sound, the stem is locked. To fold the handlebars again, slide the latch up and open the folding lever.



3) Flip pedals. To unfold it, you only have to fold it upwards until you hear a clear clicking sound. To fold, pull the pedals outwards and fold them down.

Before you start your first bike tour, all important screws must be checked and possibly tightened (especially the pedal screws should be mentioned here, these must be tightened with an open-end spanner before the first ride and checked again after a few kilometers).

👍 We wish you a good ride and a lot of fun with your folding bike!

