


Bergsteiger Florenz: assembly instructions


Fastening material for basket, light and front fender:

- a) 4x screw 15 mm (length) + washer
- b) 1x screw 30 mm (length) + washer + nut
- c) 1x screw 50 mm (length) + 2x washer + nut
- d) 1x basket mounting plate
- e) 2x screw black + washer
- f) 2x screw black + washer + nut
- g) 1x mounting plate of the light and the basket brace

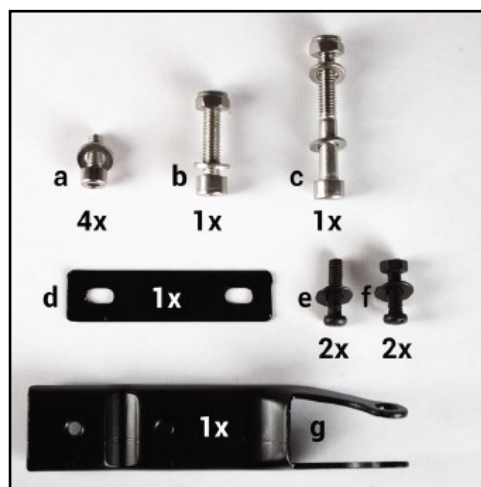


1.) Fastening the front fender:

Guide the fender to the fork from behind and fasten it with the 50 mm screw (c). Use one washer at the front and one at the back. Screw the fender stays to the fork end with the 15 mm screw (a).

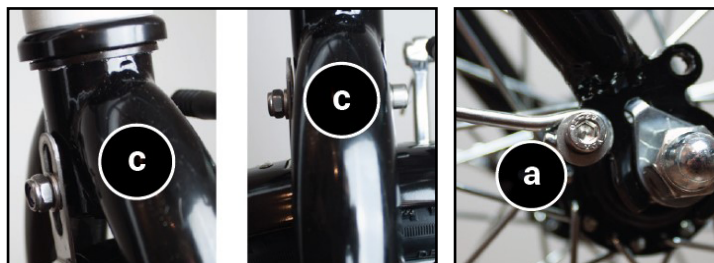


2.) Fastening the basket:

Screw the mounting plate for the light and the basket brace under the basket. Attach the black basket strut in between. For this, use both black screws (e) with a washer each. The mounting plate is threaded, so a nut is not necessary.

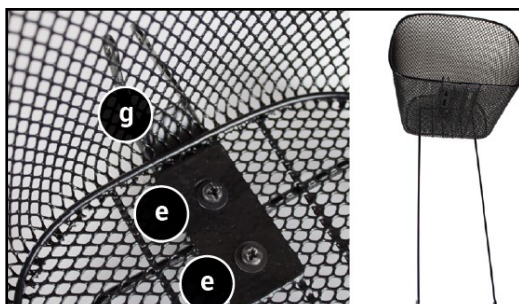

Attach the basket brace to the fork ends with two 15 mm bolts (a) and a washer. The basket can now be mounted on top of the handlebar device. Use the two black screws (f) and the basket mounting plate (d) for this. The mounting plate is used on the inside, the washers on the outside.

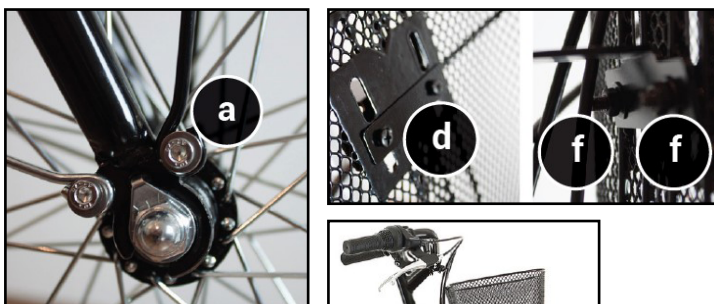

3.) Fastening the light:

Finally, the light can be mounted. Secure this to the mounting plate (d) with the 30 mm screw (b). If the distance between the light and the mounting plate is too large, you can reduce it in advance (by hand or with pliers).



👍 We wish you a good ride and a lot of fun with your city bike!